

## **Introduction**

Soyntec thanks you for purchasing your new Joinsee 300. We wish you enjoy using it.

Joinsee 300 is a VGA webcam with built-in microphone which provides an easy way to enjoy videoconference using a USB connection to your computer.

We suggest reading this user manual for enjoying this product is a safe way and with the best performance.

## **Main features**

- Built-in microphone with audio via USB.
- Innovative design suitable for both laptop and desktop computers.
- Adjustable focus.
- Automatic exposure and gain control.
- Still image resolution: VGA 640x480.
- Video resolution: VGA 640x480.

---

Specifications are subject to change without notice.  
© 2006 by Soyntec. All rights reserved.

- Capture speed: Up to 30 fps (QVGA) and up to 15 fps (VGA).
- Includes special button for taking photos.
- Features status LED indicator.
- USB 2.0/1.1/1.0 connection.
- Compatible with Windows XP / 2000 / 98SE / ME.

## **Product contents**


- Webcam.
- CD with drivers and software.
- User manual.

---

Specifications are subject to change without notice.  
© 2006 by Soyntec. All rights reserved.

## Product overview

The following picture shows the main parts of the webcam:

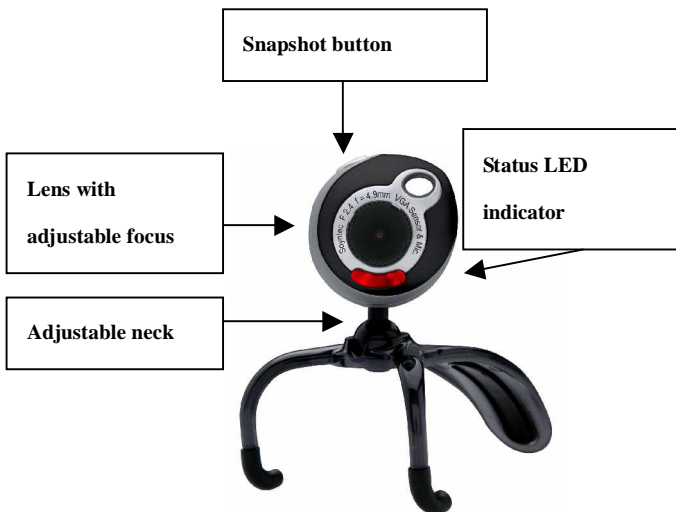

**Figura A: Webcam main parts**

---

Specifications are subject to change without notice.  
© 2006 by Soyntec. All rights reserved.

## **Webcam installation**

Please note that in order to install the Joinsee 300 webcam you need a free USB connector in your computer.

Follow these steps to install the webcam:

1. Insert the provided drivers CD and select “Install Joinsee 300 Driver”.
2. Click the “Next” button.
3. Select the type of installation (“Complete” is recommended). Click “Next”.
4. Click “Install” to start copying the files to the computer.
5. Click “Finish” to close the installation wizard.
6. Connect the Joinsee 300 webcam to a free USB connector. The operating system will detect the webcam and it will be ready to use.
7. Press the snapshot button on top of the webcam to launch the monitoring software and check that the Joinsee 300 has been properly installed.

---

Specifications are subject to change without notice.  
© 2006 by Soyntec. All rights reserved.

## **ArcSoft VideoImpression software installation**

1. Insert the provided drivers CD and select “ArcSoft VideoImpression”.
2. Select the installation language.
3. Click the “Next” button.
4. The license contract will appear. Click “Yes”.
5. The installation folder can be modified. It is recommended to leave the default folder. Click the “Next” button.
6. The new program group can also be modified. Just leave the default program group and click “Next”. The copy of files will start.
7. Click “Finish” to close the installation wizard.

---

Specifications are subject to change without notice.  
© 2006 by Soyntec. All rights reserved.

*Trademarks*

*All company, brand and product names are trademarks or registered trademarks of their respective companies.*

---

Specifications are subject to change without notice.  
© 2006 by Soyntec. All rights reserved.